


BATTERY CHARGER (Model: CH-SA14)

With this external battery charger, you can charge the approved batteries directly without plugging them into its designated electronic devices.

About the Battery Charger

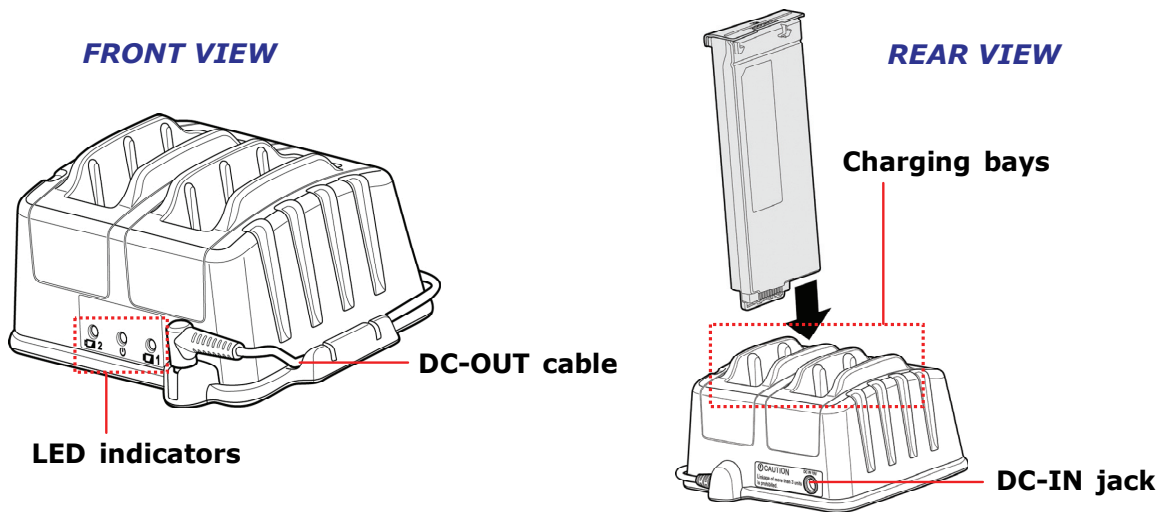

LED Indicators

Icon	Item	LED Color and Status	
	Battery indicator	Green	Charging complete
		Orange	Battery charging
		Red	Charging error
		Off	No battery is inserted
❖ The Green LED lights up when the battery is at 95% charged. For 100% fully charged pack, user will need to leave the pack to be charged for longer. ❖ The battery should be in good condition before charging.			
	Power indicator	Green	19V DC power is supplied
		Off	No power supply


Using the Battery Charger

1. Connect the charger unit to an electrical outlet with the designated power adapter.
2. Insert battery into the designated charging bay.

Each charger has two charging bays and can support chain connection to another charger using the attached DC-OUT cable, for at most up to total of 3 chargers.

When chargers are chain connected, the battery charging starts from the furthest battery pack in the chain away from the power adaptor. (The charging sequence is shown in the right figure: 1-1, 1-2, 2-1, 2-2, 3-1, 3-2)

Normal charging time will vary by the capacity and type of battery packs.

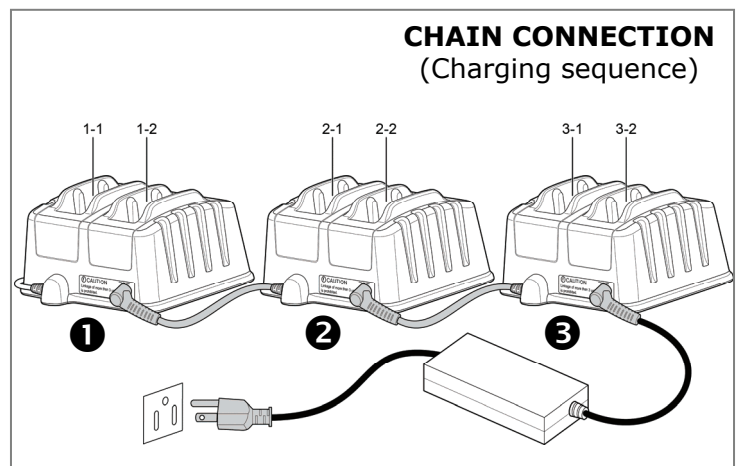

NOTE

- Use only the designated power adapter (19V/65W) to avoid damage to the charger and battery.
- Chain connecting of more than 3 chargers is prohibited!