


# ADK03T – Vehicle Docking

## Product Overview


No.	Item
1	Latch
2	Guide-Pins
3	GPS port (optional)
4	WWAN port (optional)
5	Terminal
6	Latch bar (with key slot)
7	Mounting holes for VESA mount
8	USB Ports
9	WWAN antenna (optional)
10	GPS antenna (optional)
11	LAN (RJ-45) port
12	Serial port (RS-232)
13	DC-in jack *

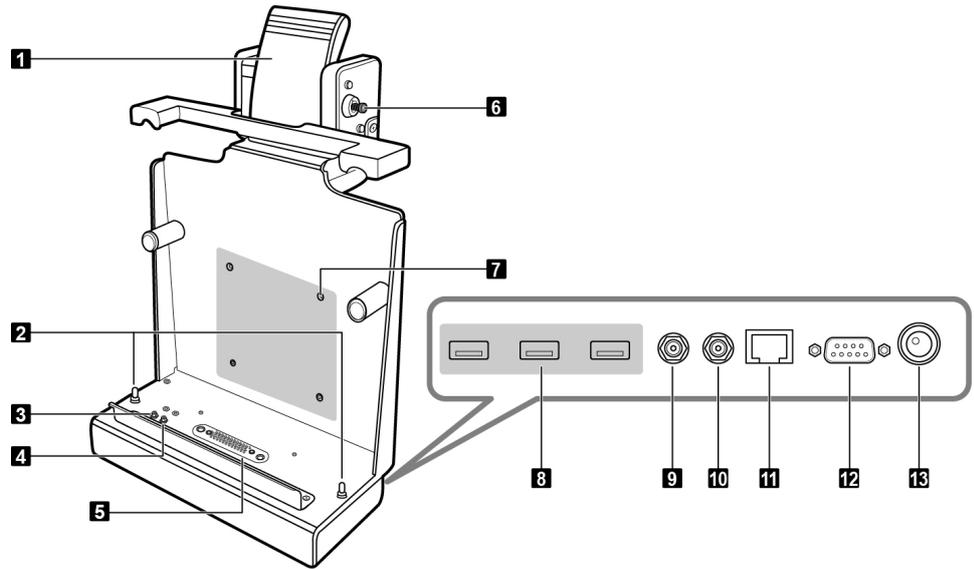


\*Please contact dealer for appropriate adapter.

## Installing the Holding Bushing

1. Place the Tablet PC on the stable place and remove the two screws at the back of the device as shown in the illustration.

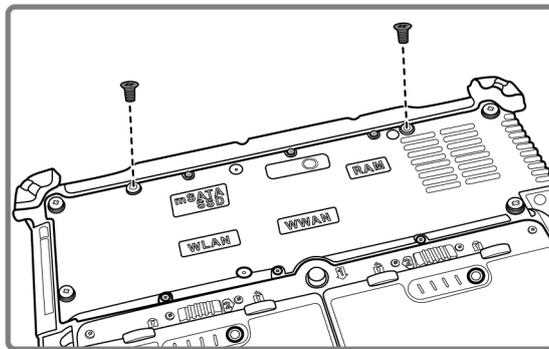

2. Align the **holding bushing** with the screw hole. Hold the **holding bushing** firmly in place while securing it with the respective screw.

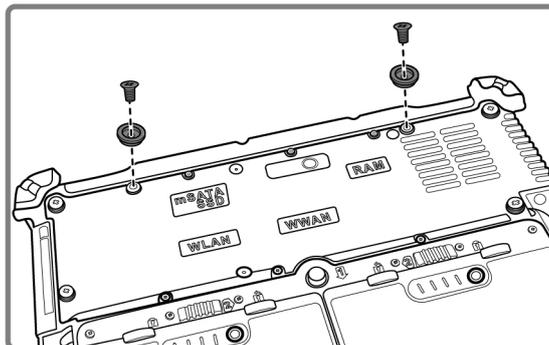


# ADK03T – Vehicle Docking

## Unlock the Latch


The latch on the docking cradle is locked during packaging.

To unlock the latch, do the following:


1. Insert the latch bar key.
2. Turn it clockwise until a “click” is heard, indicating the latch bar is released.

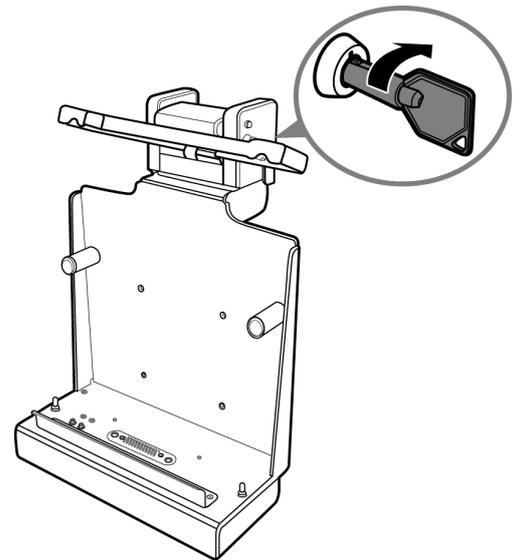

3. Remove the key from the key slot.

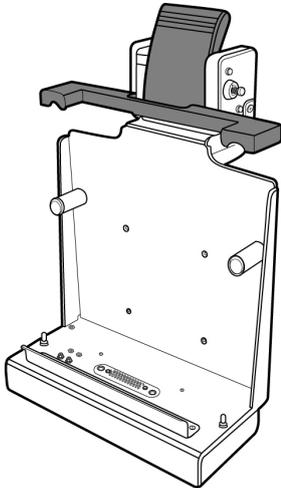



To lock the upper latch plate, pull the latch forward until it is fully engaged.

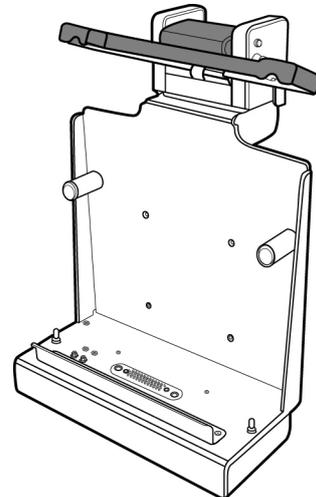

To release the upper latch, push the latch backward. The upper latch plate is automatically released.

## Docking the Tablet PC


1. Align the Tablet PC by the guide-pins and terminal contact and then place the Tablet PC onto the docking cradle.
2. To secure the Tablet PC in place, push the top of device firmly onto the cradle and pull the latch forward until it is fully engaged. Be sure the upper latch plate is aligned with the **holding bushing** at the back of the device as shown in the illustration.

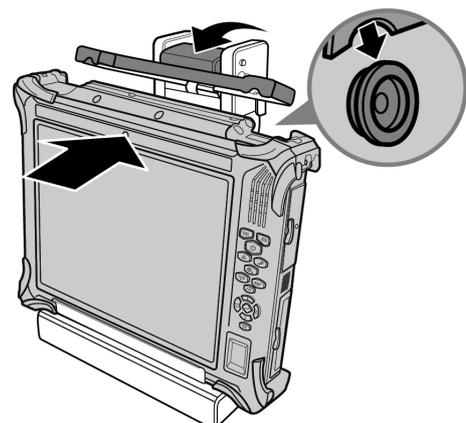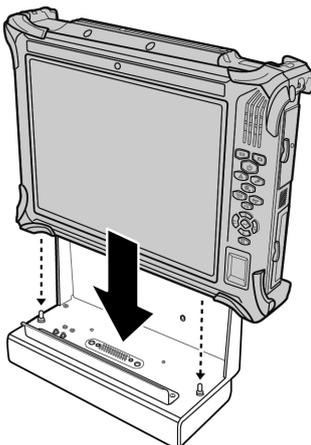

# ADK03T – Vehicle Docking

## Locking the Latch

Fully push the latch bar into position to ensure the latch is tightly secured.

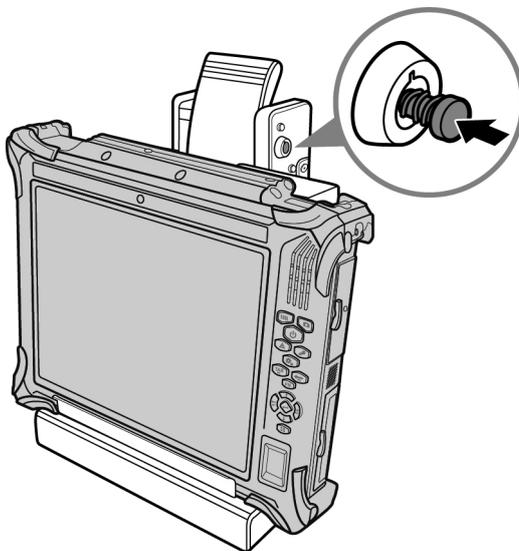

## Using the Cable Clamp

1. Attach the cable clamp on the bottom of the cradle.
2. Route the cable(s) through the cable clamp as shown in the illustration.

